


PCR Shower Water Saver

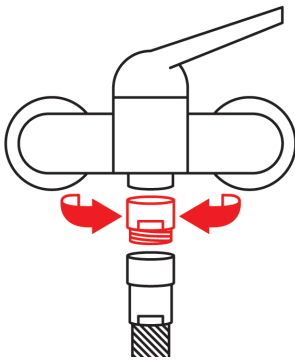

For 1/2" connections

Remove the washer from the shower hose and install the PCR shower water saver between shower faucet and shower hose.

Do not use with pressureless boilers.